



FOR OTHER SENDER TYPES,
 SEE INSTRUCTIONS WITH
 THE SENDER OR THE
 APPLICATION NOTE SUPPLIED



INSTALLATION WIRING DIAGRAM FOR MODEL CS11A SKIPLINE CONTROLLER