

# *Remote Speedometer*

## *“Speedo”*

### User Guide



#### **Introduction:**

The Skip-Line Speedo device is a remote speedometer designed with the equipment operator in mind. It clearly displays the truck speed, trip mileage, and paint usage data from your Skip-Line Control System. The Speedo can be mounted in a non-intrusive dash location, which facilitates safe operation.

#### **Installation:**

Install the Speedo in a dry location using the ¼” mounting bolts supplied with the device. Do not use bolts any longer than the supplied bolt length (½”) or internal damage to the device may result. A bracket will need to be fabricated to which the Speedo will be mounted.

The device is powered from the RJ45 jack on the back of the device. Typically, the cable that plugs into this device comes from the slave box.

#### **Operation:**

The operation of the Speedo is very simple through the use of one (1) two way rocker switch marked *Reset* and *Select* (see Figure 1). Use *Select* to navigate through the different channels and *Reset* to reset the currently selected channel.



(Figure 1)

