

CRPB-818 Remote Trigger Quick Start



Remote Trigger Functions

- The activity light will blink steadily at 1/2 second intervals when there is CAN activity.
- The left/right switch allows you to quickly and easily toggle the remote between controlling the right side guns and the left side guns.
- Semi-Auto allows the operator to paint one full stripe length with one pull and release of the trigger for all guns in SKIP.
- Off will disable the remote.
- Manual allows the operator to pull and hold the trigger to achieve full control of all guns in SKIP.
- The trigger allows for easy and comfortable operator control.

Avoid operator fatigue when retracing with the CRPB-818 Rework Remote Trigger. The ergonomic design significantly reduces strain over flipping toggles when repainting inconsistent skips.

Also very "handy" when precision is critical.




Console Installation

The CRPB-818 Remote Trigger can be plugged directly into the BUS-012 or Core Hub. If your hub is in a difficult to reach location, you can use a 13/16" drill bit or a d-punch to create a mounting hole on the side of your console to allow for easier plug and play. Simply connect your coupler to your hub with a Cat5 cable.



■ RJ45 Panel Mount Coupler

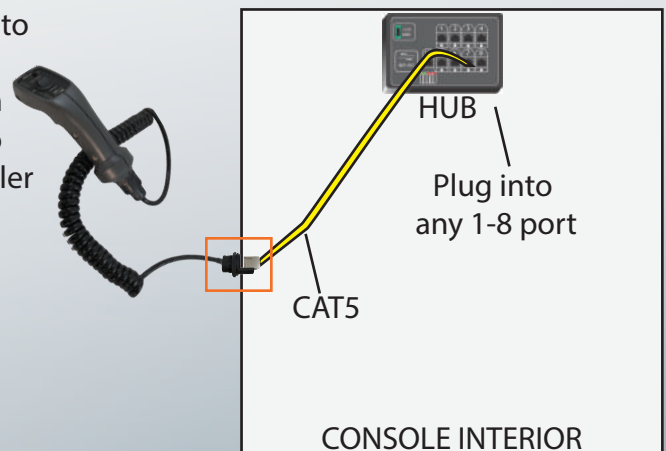

FOR MORE DETAILED INFORMATION SEE YOUR MANUAL.